



INSTALLATION INSTRUCTIONS

Accessory
GOLD EMBLEM KIT


Application
**2003 ACCORD
2-DOOR**

Publications No.
All 24078
Issue Date
SEP 2002

PARTS LIST

**Gold Emblem Kit (sold separately):
P/N 08F20-SDN-100**


Front gold "H" emblem

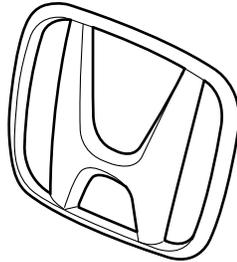

Rear gold "H" emblem



Rear gold
"ACCORD" emblem

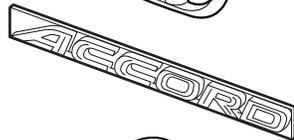

2 Push nuts



**Rear Gold "V6" Emblem Kit (sold separately):
P/N 08F20-SDA-100A
P/N 08F20-SDN-100B**



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver
Flat-tip screwdriver
Ratchet
10 mm Socket
Diagonal cutters
Long nose pliers
Isopropyl alcohol
Shop towel
String
Masking tape
Blanket

INSTALLATION


Customer Information: The information in this installation instruction is intended for use only by skilled technicians who have the proper tools, equipment, and training to correctly and safely add equipment to your car. These procedures should not be attempted by "do-it-yourselfers."

NOTE:


- Be careful not to damage the body paint finish when removing and installing the emblems.
- This emblem kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to "cure", do not wash the car for 24 hours.

Installing the Front Gold "H" Emblem


1. Open the hood. Remove the ten clips that fasten the radiator cover, and remove the cover by releasing the four retaining tabs.

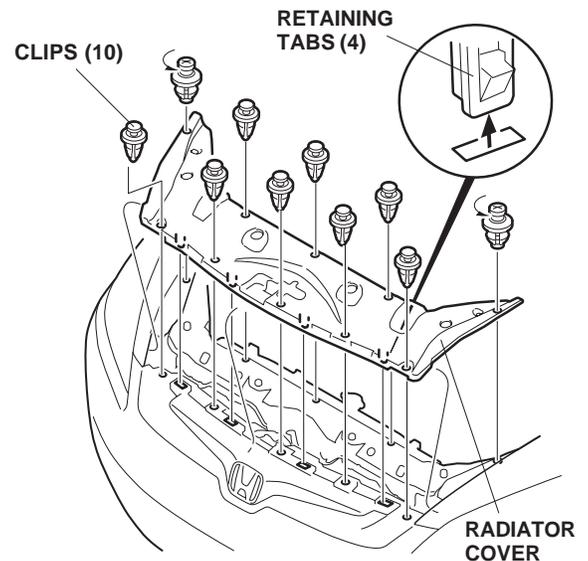


- Remove the six clips, four bolts and two self-tapping screws that fasten the front bumper, and remove the bumper.

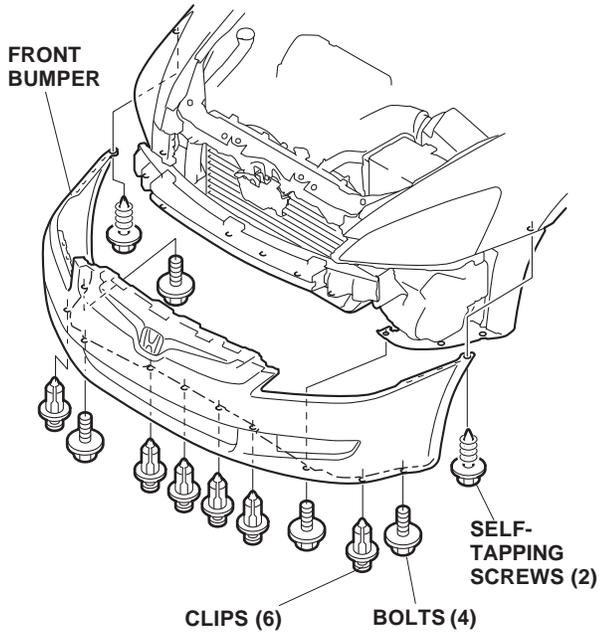


- Remove the four self-tapping screws that fasten the front grille to the front bumper, and remove the front grille.

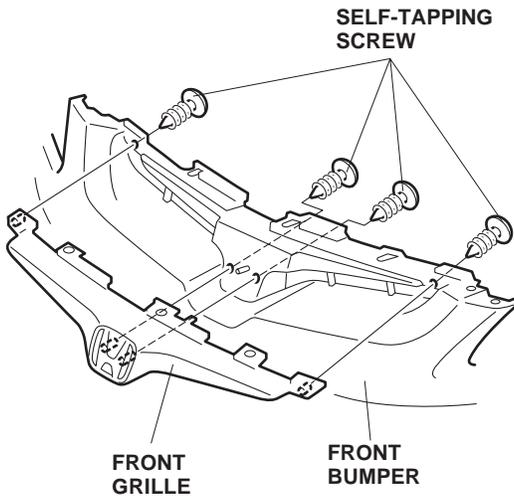


- Inside the front grille, cut off the two pins, and remove the push nuts and the old "H" emblem.

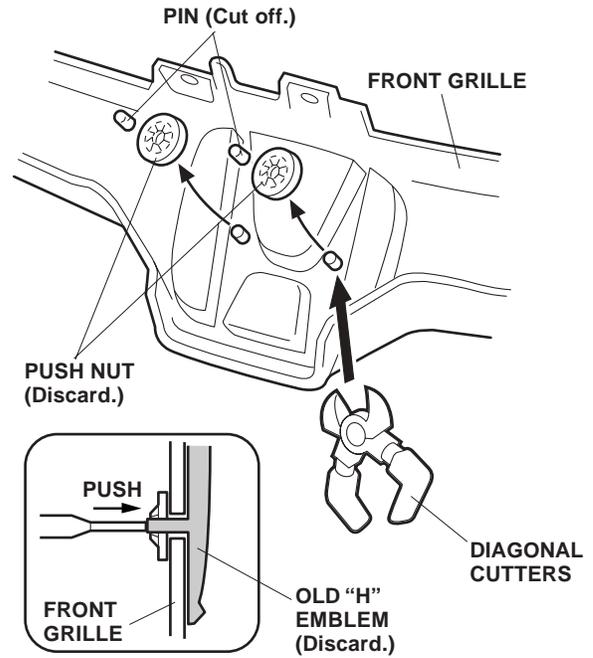

- Position the gold "H" emblem on the grille by aligning its pins with the holes in the grille.

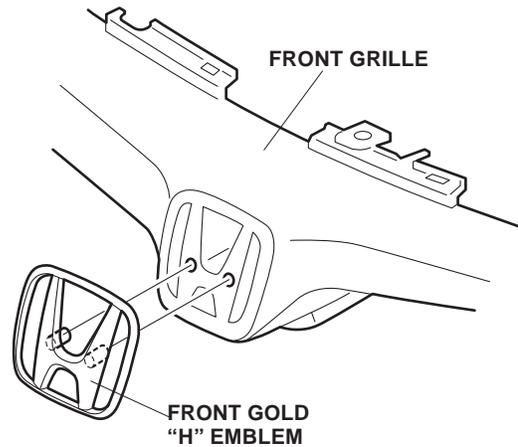



- Slide the push nuts onto the pins. Note the direction of the push nuts.

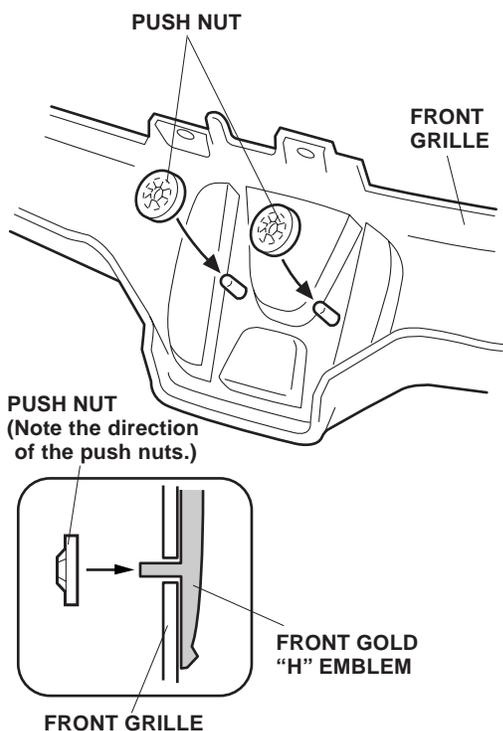


- Reinstall all removed parts. Check that the clips are installed securely.

Installing the Rear Gold "H", "ACCORD" and "V6" Emblems

- Mark the locations of the existing "H", "ACCORD" and "V6" emblems by applying masking tape along the edges as shown.

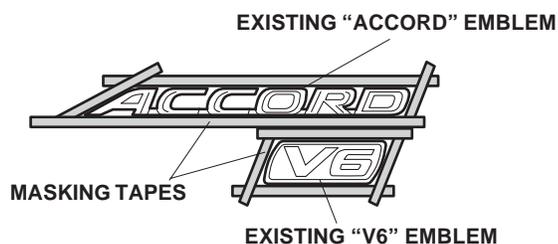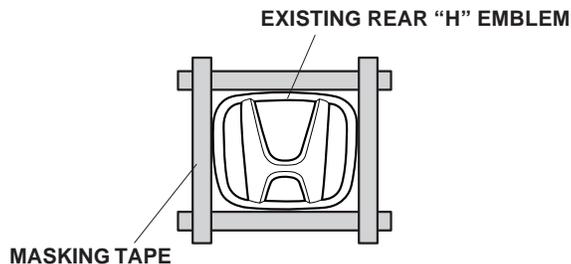


- Remove the "H", "ACCORD" and "V6" emblems from the body by moving the string back and forth, and working it between the emblems and body.

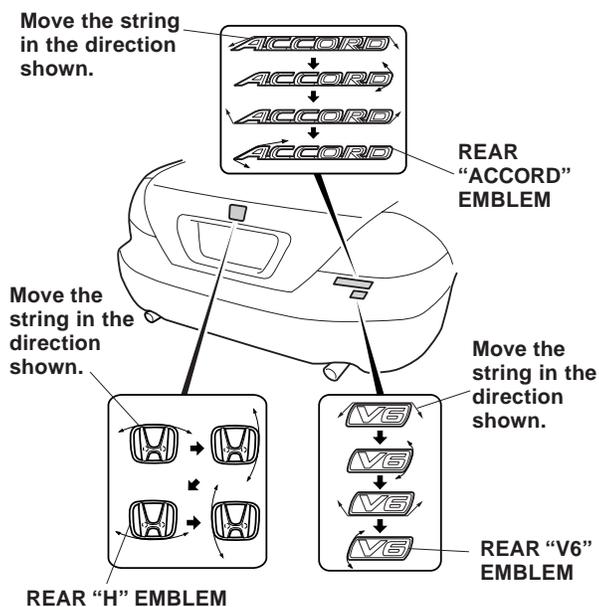


- Remove the emblems.

- If any clip(s) stayed in the body panel, make sure you remove and discard the same clip(s) on the new gold "H" emblem.

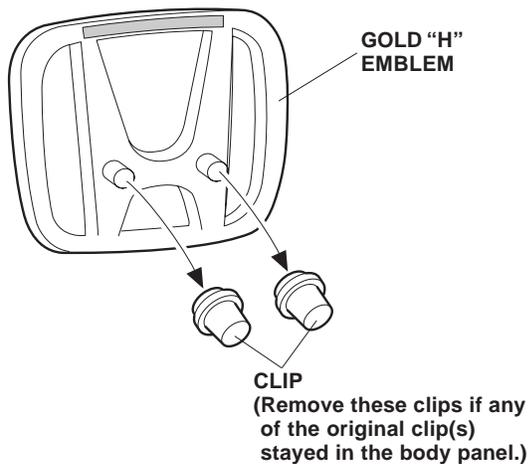

- Using isopropyl alcohol on a shop towel, clean the areas where the gold "H", "ACCORD" and "V6" emblems will attach.
- Remove the adhesive backing from the "H", "ACCORD" and "V6" emblems, and attach them to the body. After attaching, hold the emblems firmly against the body with the palm of your hand for 30 seconds.

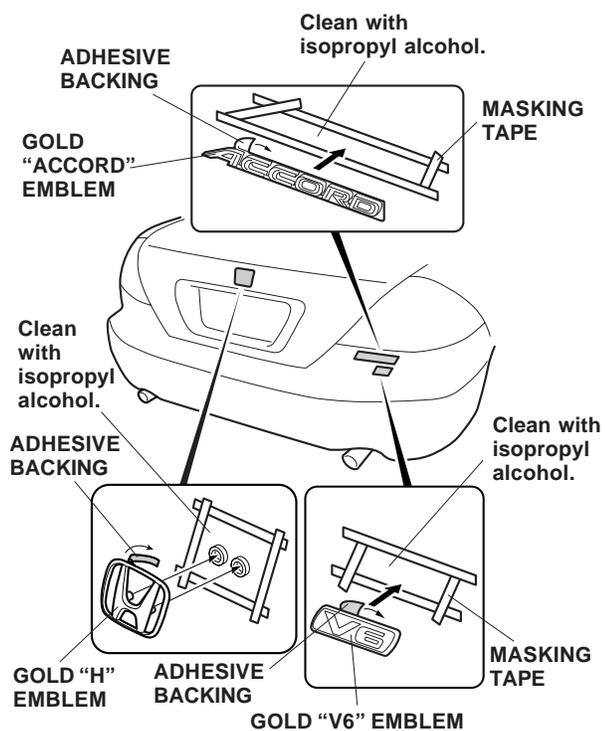

- Remove the masking tape.