



INSTALLATION INSTRUCTIONS

Accessory

**AIR DEFLECTOR
P/N 08P47-SHJ-100**

Application

2005 ODYSSEY

Publications No.


All 27332

Issue Date

OCT 2004

PARTS LIST

Air deflector

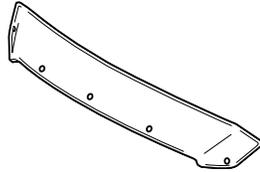

Center front bracket



2 Front bracket



2 Side brackets



2 Screws



4 Grommets



4 Truss screws



2 Collars



2 Alcohol pads



3 Clips



5 Protective tapes



Center stopper



TOOLS AND SUPPLIES REQUIRED

Phillips screwdriver

Tape measure


Felt-tip pen

Shop towel


INSTALLATION

NOTE: Be careful not to damage the body finish when you install the air deflector.

- Using an alcohol pad, clean the area of the hood where the center stopper will attach.

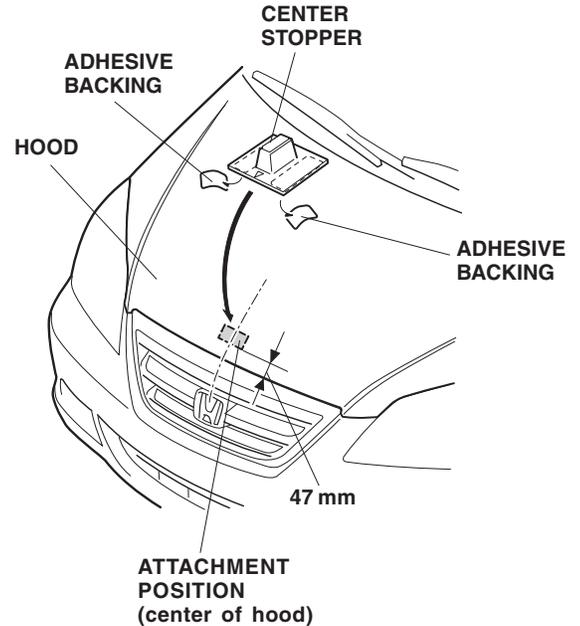


- Remove the adhesive backings from the center stopper and attach the stopper to the indicated position of the hood.
- Open the hood. Locate the four outer square holes on the inside of the hood.

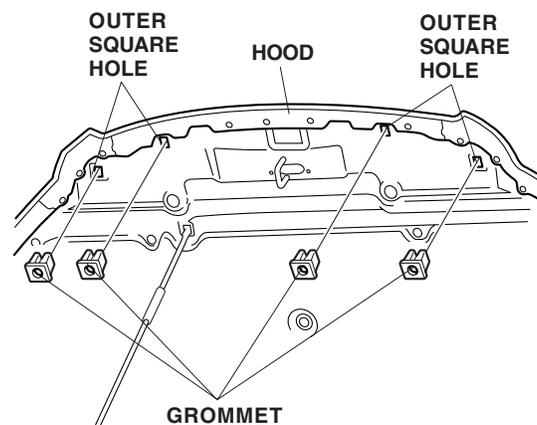


- Push a plastic grommet into each of the four outer square holes in the hood.


- Using an alcohol pad, clean the areas of the hood where the brackets will mount. Remove the adhesive backing from the protective tape and attach one protective tape to the hood where each air deflector bracket will mount.

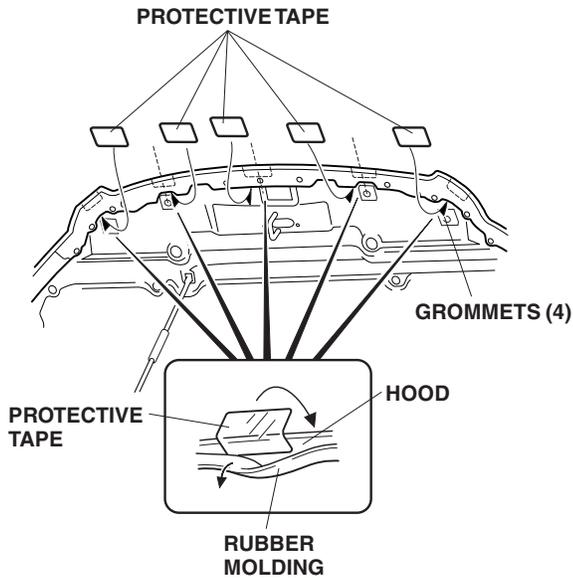

- Attach the center bracket to the air deflector with one clip.

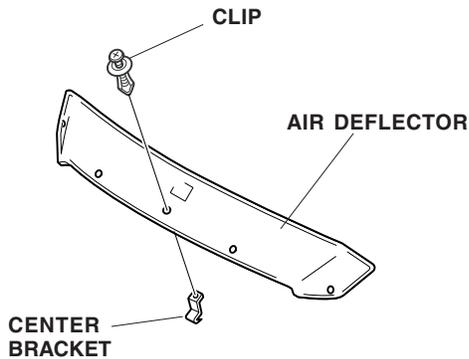

- Pull down on the rubber molding from the inside edge of the hood, and slide the two front brackets and two side brackets over the lip of the hood, under the rubber molding. Align the holes in the brackets with the holes of the plastic grommets, and install one truss screw through each bracket.

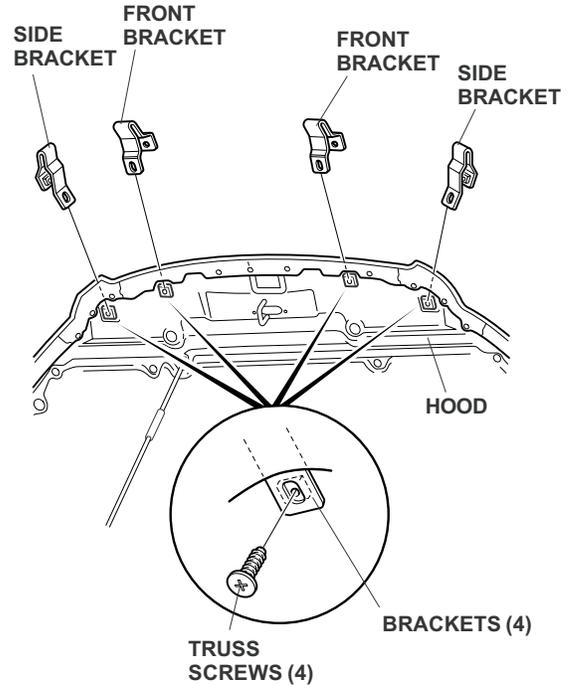

- Lower the hood. Pull down on the rubber molding from the inside edge of the hood, and slide the center brackets attached to the air deflector over the lip of the hood where the protective tapes are attached.
- Align the holes in the air deflector with holes in the brackets, and install the two clips and two screws with collars. Tighten the screws securely.

