



# INSTALLATION INSTRUCTIONS

Accessory

**BLACK CHROME  
EMBLEM KIT**  
P/N 08F20-S2A-100

Application

2003 S2000

Publications No.

**All 24236**

Issue Date

**SEP 2002**

## PARTS LIST


Front "H" emblem



Rear "H" emblem



2 Side emblems

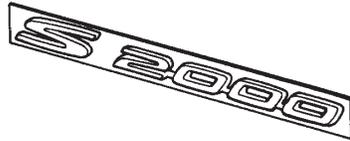

2 Push nuts



## TOOLS AND SUPPLIES REQUIRED

Isopropyl alcohol

Shop towel

Long-nose pliers

Masking tape

String


## INSTALLATION

### NOTE:



- Be extremely careful not to damage the body finish when removing and installing the emblems.
- This emblem kit should be installed only if the ambient air temperature is 60°F (15°C) or above.
- To allow the adhesive to "cure," do not wash the car for 24 hours.

## Installing the Front "H" Emblem


1. To prevent damage to the front bumper, apply masking tape along the four edges of the existing emblem.

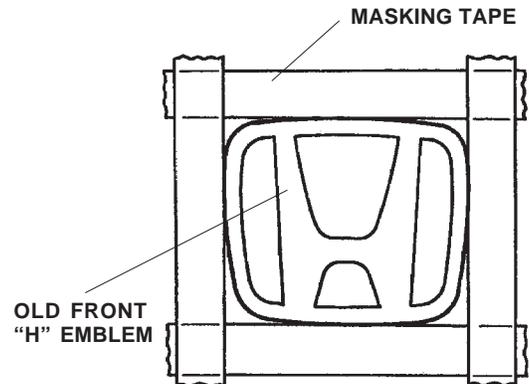


2. Using a piece of string, loosen the emblem by cutting through the adhesive backing. Move the string in the directions shown to cut the emblem free.

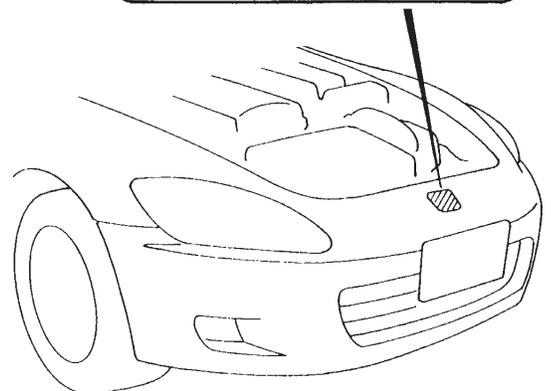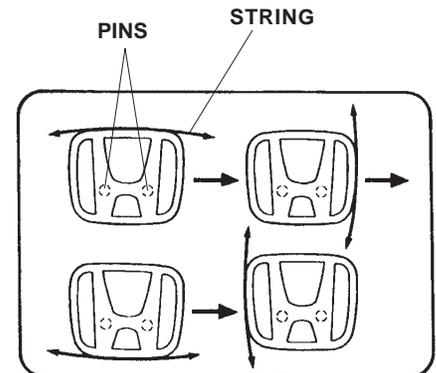


- Open the hood, and locate the two pins extending from the "H" emblem. Reach behind the front bumper, squeeze the retaining tabs on the pins, and remove the emblem.

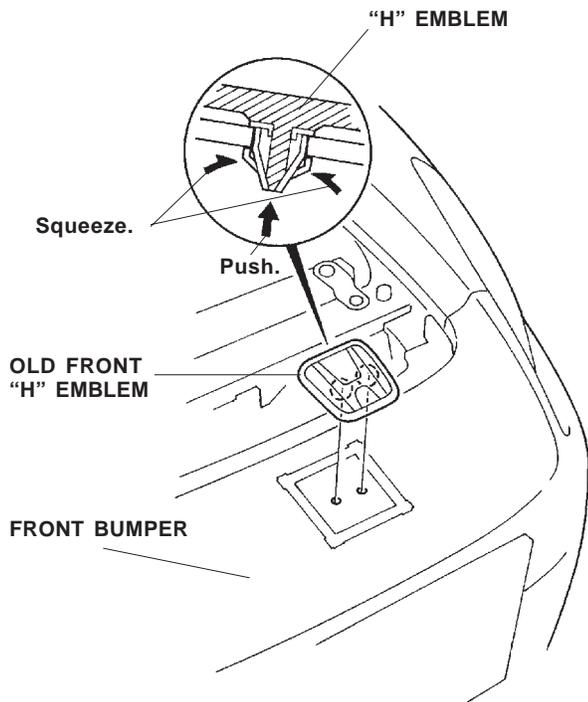

- Using isopropyl alcohol on a shop towel, clean the area where the emblem was removed.
- Remove the adhesive backing from the new "H" emblem, and attach it to the front bumper by aligning the locating pins with the holes in the front bumper. Press the emblem firmly against the front bumper with the palm of your hand for about 30 seconds.

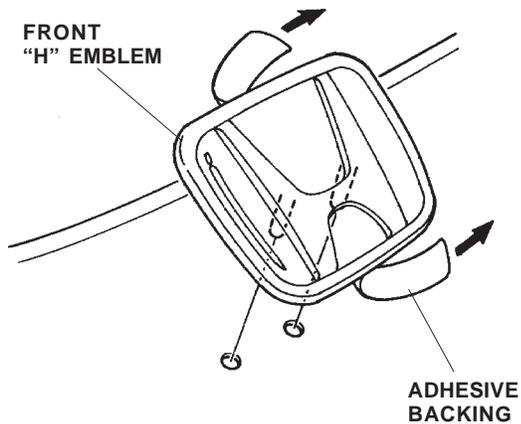


- Attach the emblem with the push nuts.

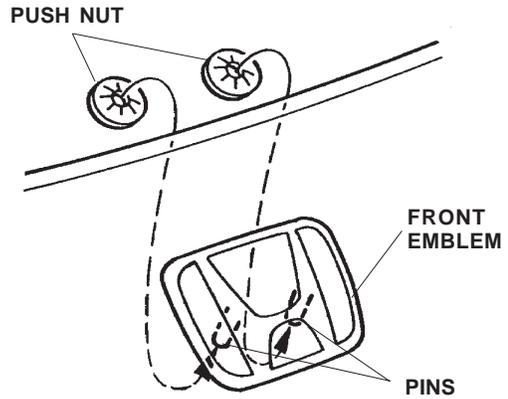


### Installing the "S2000" Emblem


- To prevent damage to the body finish, apply masking tape around the existing "S2000" emblems.

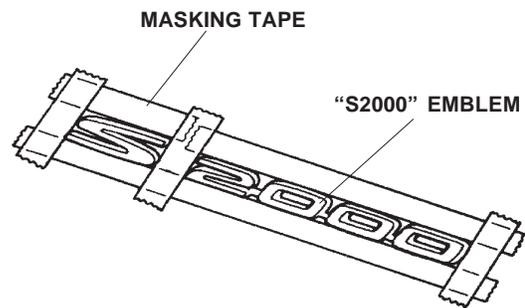

- Using a piece of string, remove the emblems.

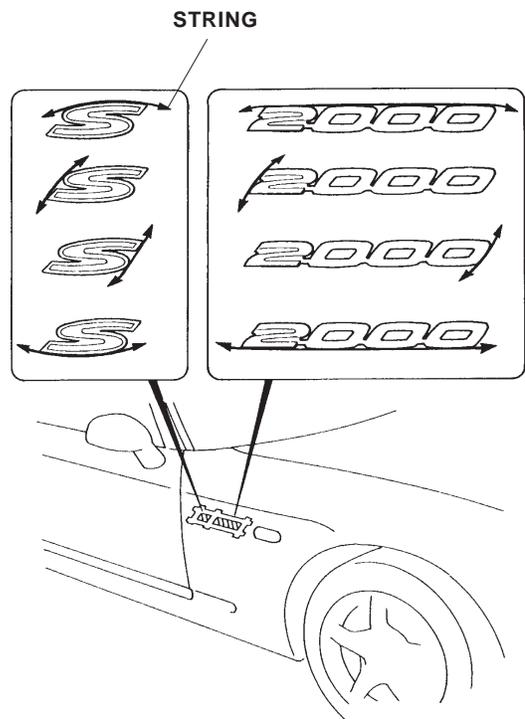


9. Using isopropyl alcohol on a shop towel, clean the area where the emblems were removed.
10. Remove the adhesive backings from the new "S2000" emblems, and install them on the vehicle so they line up with the masking tape. Using the palm or your hand, apply pressure to the emblems for about 30 seconds.

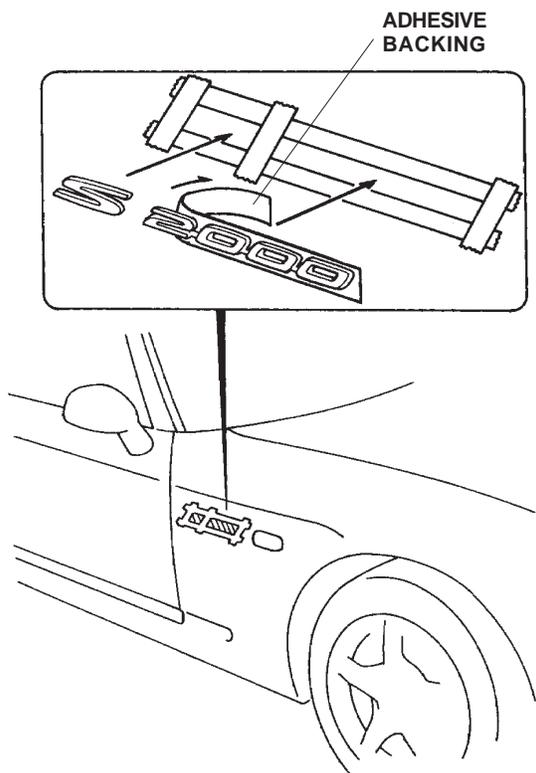


11. Repeat steps 7 through 10 to install the other "S2000" emblems.
12. Remove the masking tape.

### Installing the Rear "H" Emblem


13. To prevent damage to the trunk lid, apply masking tape along the four edges of the existing rear "H" emblem.

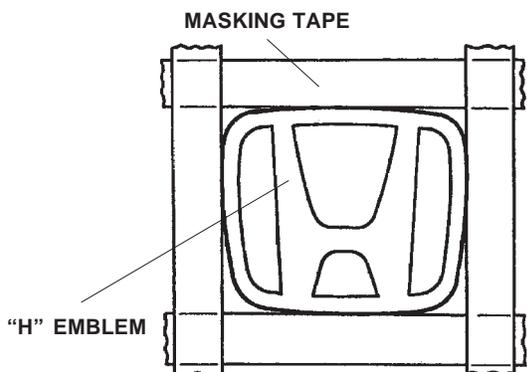

14. Using a piece of string, remove the emblem from the trunk lid. Move the string in the directions shown to cut the emblem free. Take care not to damage the body finish.

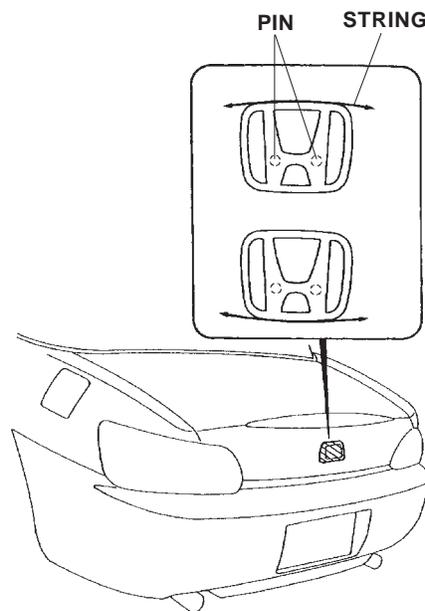

15. Remove the emblem pin inserts from the trunk lid. Using isopropyl alcohol on a shop towel, clean the area where the emblem was removed.
16. Remove the adhesive backing from the new "H" emblem, and attach it to the trunk lid by aligning the locating pins with the holes in the trunk. Press the emblem firmly against the trunk lid with the palm of your hand for about 30 seconds.

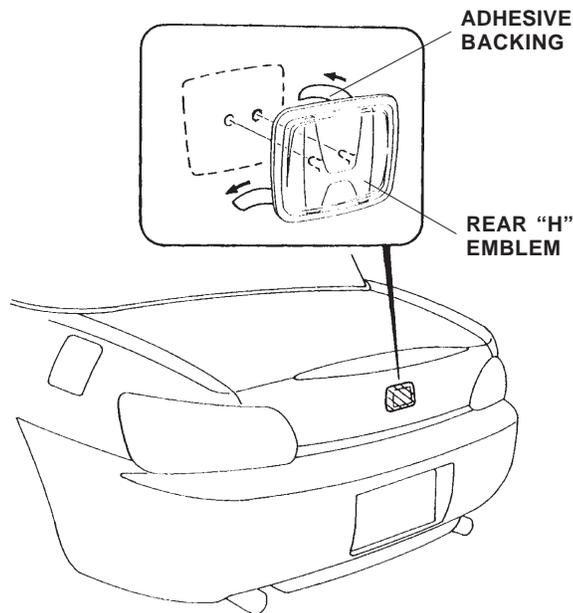

17. Remove the masking tape.